


mob

INSTALLATION INSTRUCTIONS

Bathtub faucet

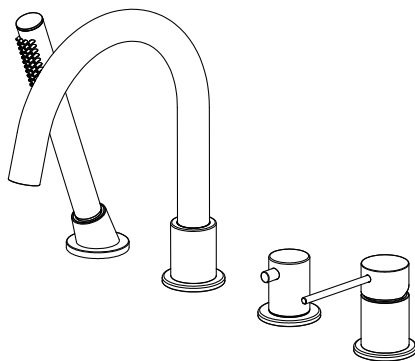


Make sure the product is suitable for the use environment (pressure : 0.03 MPa - 1 MPa, temperature: 5°- 90°C)

Turn off the waterway switch before installation


Prepare the tools you may need



Unit:mm

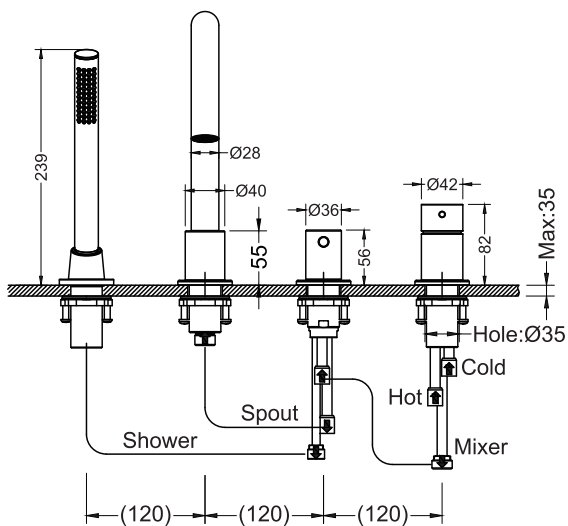


1

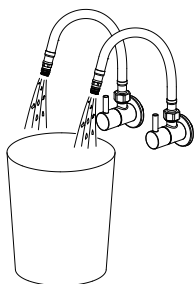

Shut off water suppliers. Remove the old faucet, clean the mounting surface.


Note: For first time install, flush the pipes first by open the angel valve to run 60s.

2

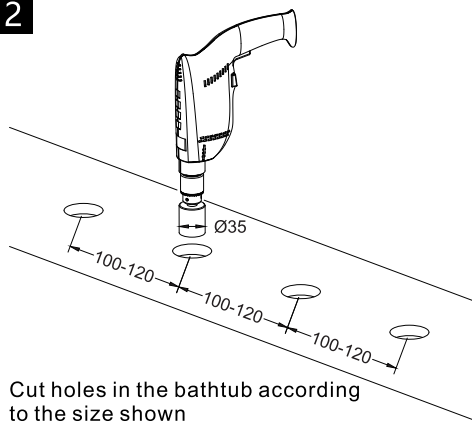


Cut holes in the bathtub according to the size shown

3

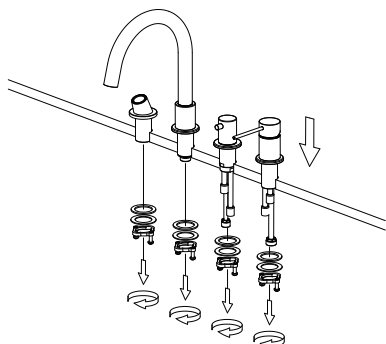


Insert the faucet into the holes, and from below the bathtub, Slide rubber washer, metal washer and mounting bracket onto the thread shank.

4

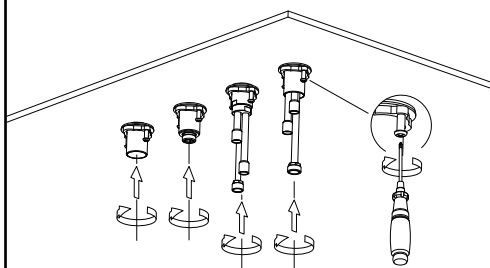


Adjust position of faucet body if necessary, Then tighten the mounting nuts with phillips screwdriver until snug.

5

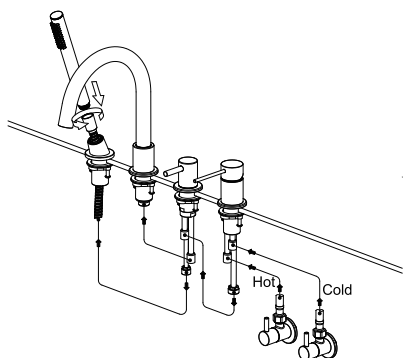

Connect the pipes according to the instructions above.

6

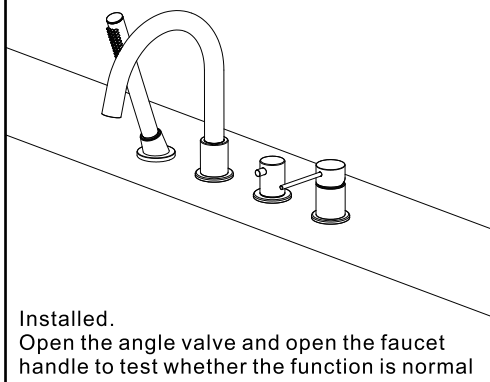

Installed.
Open the angle valve and open the faucet handle to test whether the function is normal

Before Use

In order to ensure the faucet functional stability and long-lasting appearance, please follow the following precautions:

The main body of the faucet is made of high-quality brass. Brass is soft, so do not hit it with hard objects;

Each component of this product has been professionally assembled and tested before leaving the factory. Non-professionals should not disassemble it to avoid affecting the product warranty;

Do not use this product at overpressure or temperature to avoid excessive harm to your body and irreversible damage to the product;

In order to maintain a better appearance, rinse the surface stains with clean water after each use;

Do not use metal or other hard cleaning tools to clean the product surface to avoid scratching the product;

Do not use acidic or other highly corrosive cleaners to clean the product surface to avoid damaging the product surface coating;

When a product malfunctions, contact the dealer promptly to send a professional to perform maintenance.